遍布全国的销售服务网络 详细联系方式请登录 www.ydepss.com

中美合资 怡达快速电梯有限公司

地址:浙江省湖州市南浔区南浔镇联谊西路88号

邮编: 313009 电话: 0572-3062222 传真: 0572-3062236

邮箱: yd@ydelevator.com

SINO-AMERICAN JOINT VENTURE
YIDA EXPRESS ELEVATOR CO.,LTD

ADD: No.88 West Lian Road, Nanxun Town, Nanxun District, Huzhou City, Zhejiang.

Postcode: 313009 Tel: +86 0572 3062226 Fax: +86 0572 3638708 E-mail: info@ydelevator.com

中国区免费服务热线: 400 887 6336

www.ydepss.com

EPSS ELEVATOR

Bed elevator Series

病床系列电梯

EBJ30 \ EBW30





EPSS-YY2014 第一版








承载安全 传递微笑

Bearing security Pass a smile

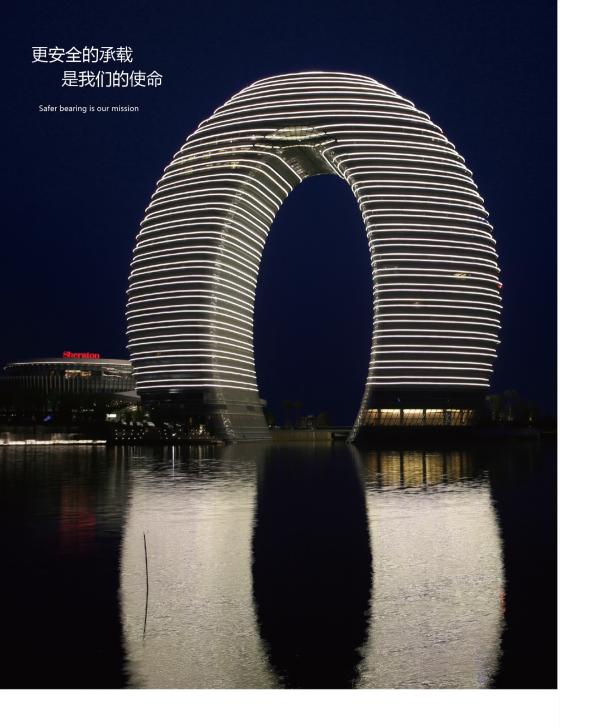

About Us 公司简介



每天,全球有50多个国家和地区享受到怡达快速电梯带来的 安全、高效、节能的上下体验。

致力于专业从事电梯研发、设计、制造、销售、安装、维保,中美合资恰达快速电梯有限公司是国内较早取得电梯A级制造许可证的企业之一。

如今,恰达快速电梯在总占地面积约11万平方米的新厂区,引进当今世界最先进的自动化生产设备,建立起世界一流的电梯专业工厂,制造全球的智选电梯。

"提供完美的电梯安全与服务",不再只是一句口号,而是 落实在电梯选材、设计、生产、检测、安装、维保的每个环 节,为客户提供具有国际水准的适配产品和卓越服务。 Everyday, more than fifty countries in the world can enjoy the perfect ride experience, which is safe, efficient, energy saving from Yida Express Elevator.

Devoting itself to professional working in elevator research, design, manufacturing, sale, installation and maintenance, Sino-American Joint Venture Yida Express Elevator Co.Ltd. is one of the earliest companies in China, which achieve A-class elevator manufacturing license.

Nowadays, Yida Express Elevator has moved to the new factory, which covers an area of about 110000 m². The company has imported the most advanced high automation level production equipments and built first—class elevator professional factory. It devotes to manufacturing intelligent elevators supplied to all over the world.

"Provide prefect elevator safety and service" is not just a slogan. Instead, it is implemented in every production step such like elevator material selection, design, manufacture, inspection, maintenance. It provides compatible product with international standard and excellent service.







7 特色安全功能

• 抱闸力自动检测

电梯制动器长时间使用造成的闸皮磨损会导致其制动力下降, 系统将适时按"标准"对其进行制动力的检测及报警提示。

• 曳引绳滑动检测

实时检测电梯运行(位置)偏移量。超出允许值时,电梯减速,停止运行(就近平层)。

2 无障碍功能

- 残疾人操纵箱
- 盲文按钮
- 语音报站
- 后壁扶手

■ * 红外线光幕保护

■ 停电应急疏散装置(选配)

分析结果并给出故障描述,安全可控。

→ 专用运行功能

能直接行使至目的楼层,让危重病人开辟急救的绿色通道。

5 智能分析

■ 故障分析专家系统 自动获取故障发生时的电梯状态信息。后台分析,处理。显示

□ 智能 IC卡系统

根据用户的需求,可配置IC卡智能管理系统,对电梯实行权限 管理,提高楼宇管理的安全性。

フ 远程监控

■ 智能终端异地监控

在监控中心或远程的智能手机可实时观测异地电梯的参数及运 行状态,且能通过数据流传输语音、图片、视频等。

三 群控管理

采用高性能的群控管理系统,可以实现3-8台电梯群控功能,对厅外召唤的应答作出合理的统筹处理,有效缩短了候梯时间,实时适应乘客流量的变化。

Intelligent System 智能系统

Safety Function

Brake force automatic detection

Brake rubber abrasion, which is caused by elevator brake using for a long time, will lead to decline the brake force. System will detect the brake force and alarm remind according to the "Standard".

Hoist rope sliding detection

Offset of running location should be detected in real time. Elevator will slow down and stop running when the steel rope slipping exceeds the allowable value,(stopping on the nearest floor)

Accessibility features

- COP for the disabled
- Braille button
- Voice announcer
- Handrail on rear wall
- Infrared light curtain protection
- Emergency landing rescue device (optional)

Dedicated operation function

This function can make the elevator directly run to the destination floor, create a first—aid green channel for critically ill patients.

Intelligent analysis

Failure analysis expert system

To acquire the elevator state information automatically when it is failure, then system will make analysis and dispose. It will display the analysis result and describe the failure.

Intelligent IC card system

IC card can be configured according to user requirements, IC card can execute permissions management for elevator, which improves the safety of the building management

Remote monitoring

Intelligent terminal remote monitoring

It can monitor the elevator parameters and running condition in the monitor center or remote intelligent celliphone.Meanwhile,it can transfer voice,pictures and videos by data strem.

Group control management

High performance group control management system enable 3–8 sets of elevators to carry out the function of group control, which response and deal with the hall call reasonably and reduce the passenger's waiting time effectively. The system adapted to the change of passenger flow real-timely.



降低城市建筑炭排放!

怡达快速电梯严格遵循美国快速电梯全球产品研 发标准,采用世界领先的先进技术和设计理念, 运行高效、节能环保,为您的未来提供完美运 载。

Reduce the building carbon emissions

EPSS elevator complies with the Products Research & Development standard of American Express Elevator Co., Ltd. strictly. With advanced technology and design concept, featuring effective running and energy-conservation and environment-protection, it provides a perfect carrier for your future.

Energy conservation & Environment protection 节能环保

选用稀土材料,将同轴传动技术、数字变频技术和群组电脑 组合控制技术充分融合,运行成本小,能量散失低,比一般 传统技术可节信能源33%以上。无齿轮曳引机无需更换油 脂,无油漂污染,低噪音。

Using rare earth material combined with coaxial drive technique, digital VF technique and group computer control technique lessened the cost and the energy dissipation, and it can save by more than 33% energy than traditional machine. Gearless traction machine needn't oil change, so there is no oil pollution and the noise is lower.

可选配新型能量反馈系统,将消耗在制动电阻上的能量转化 为电能,供楼宇内其他电梯或用电设备使用,我们的"绿色 发电机"可以节约30%的能耗,增添节能环保效益。

The optional device can transfer the energy consumption in the braking resistance into electrical energy which will be supplied to other elevators or electrical equipments in the building. Our "green generator" can save 30% energy consumption and increase energy saving and environment protection benefit.

轿内LED照明装置,光线柔和明亮,热度低,安全、高效、 无辐射,有利于长效使用,且系统在电梯空闲未使用状态下 自动熄灭,绿色环保。

LED lighting device in car is beneficial to long – term use, the lighting is soft and bright, low–heat, safe, high efficient and no radiation, and automatically power off in the elevator idle time, it is environment protection.

可选用先进的环保技术,通过负离子使空气中的PM2.5等微 尘形成分子团下沉落地,使细菌生存能力下降或致死,定时 除菌,净化空气,提供绿色健康的电梯乘坐环境。

Applying advanced environment protection technology, PM2.5 dust in the air etc. will form to molecular clusters and sink to the ground by anion. It will less the bacterial survival ability or kill bacteria. Timing sterilizing and air cleaning improves the cabin environment.



Permanent magnetic power 永磁动力



Energy feedback system

能量反馈系统



LED automatic lighting

LED自动照明



Sterilization function 洁净抗菌功能



EX-B01 标准配置

吊顶: EX-J020发纹不锈钢,亚克力拱形灯饰板

操纵箱: EX-AC50 显示: 点阵显示

轿壁: 发纹不锈钢 地板: EX-DB05 (耐磨PVC)

轿门: 发纹不锈钢

EX-B01 Cabin (standard)

Ceiling: EX-J020 Hairline stainless steel, acrylic arc decorative board

C.O.P.: EX-AC50 Indicator: Dot matrix display

Cabin wall: Hairline stainless steel

Cabin flooring: EX-DB05 (wear resistant PVC)

Cabin door: Hairline stainless steel

Cabin series 轿厢



EX-AC51

点阵显示

dot matrix display









EX-AC52 点阵显示 dot matrix display



点阵显示

dot matrix display









EX-JC3L EX-JC5L 液晶显示 点阵显示 Dot matrix display LCD display



残疾人操纵箱 EX-AC8B Handicapped C.O.P. (选配 optional)







EX-B02 标准配置

吊顶: EX-J051喷涂钢板框架, LED照明

操纵箱: EX-AC50

显示: 点阵显示 轿壁: 喷涂钢板

地板: EX-DB01(耐磨PVC)

轿门: 喷涂钢板

扶手: 两侧配不锈钢扶手EX-FS01

EX-B02 Cabin (standard)

Ceiling: EX-J051 Painted steel sheet frame, LED lights


C.O.P.: EX-AC50

Indicator: Dot matrix display
Cabin wall: Painted steel sheet

Cabin flooring: EX-DB01 (wear resistant PVC)

Cabin door: Painted steel sheet

Handrail: EX-FS01 stainless steel on two side

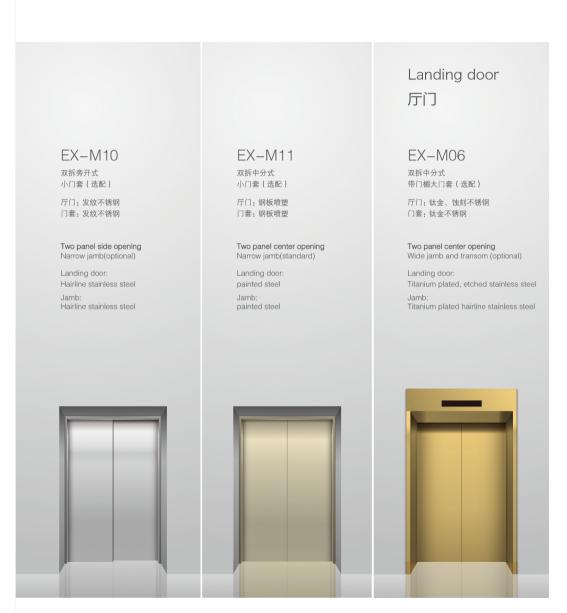

Handrail series (optional)

扶手系列 (可选)



EX-FS03 不锈钢短纹圆弧头

Stainless steel with arc angel

Floor series (optional)

地板系列(可选)









EX-DB01 PVC

EX-DB03 PVC

EX-DB04 PVC

EX-DB05 PVC

Colors (optional)

色标(可选)









EX-YS08 马钢代码7013

EX-YS09 马钢代码1011

→ Standard Function 标配功能

运行功能	
电梯变频驱动	精确调整电动机转速,令电梯启动、运行、停止时的速度曲线平稳、圆滑,获得良好的舒适感。
门机变频驱动	精确调整门电机转速,使电梯门的开启、关闭更轻柔灵敏。
自动运行	电梯在无人操控的情况下,按照乘客给出的指令自动运行,将乘客送至目的层。
司机运行	电梯由司机进行操控,司机按乘客的要求给出指令,电梯按指令要求驶向目的层。
VIP(专用)运行	优先直使VIP目的层,提供VIP贵实服务。
最佳曲线自动生成	以距离为原则,自动运算出最适合人机功能原理的速度曲线,没有个数的限制,而且不受短楼层的限制。
加速段截车响应	系统允许在电梯加速的过程中载车,自动响应相应的服务楼层指令,提高运行效率。
分时服务层选择	系统可以灵活设定分时服务时间段和相应的分时服务楼层。
满载直驶	当轿内满载时,为保持最大运行效率,该轿厢将自动越过召唤层站。
开门时间自动调整	按照层站召唤或轿厢召唤的区别,自动调整保持开门时间。
本层重开门	关门途中,可以按本层站召唤按钮使门重新开启。
即时关门	电梯停站开门到位时,按下关门按钮,门立即被关闭。
停梯开门	电梯减速平层,直到完全停稳后方可开门。
轿厢到站钟	装于轿顶的电子钟的钟声告知乘客电梯已到站。
指令误登记消除	乘客可以采用连续按动指令按钮两次的方法来取消错误登记的指令。
驻停	关闭电锁后电梯进入驻停状态,电梯不再响应任何外呼。
换站停靠	如果电梯在开门超过开门保护时间后,开门到位信号仍然无效,电梯将自动关门,自动运行至下一层停靠。
低速自救	当电梯处于非检修状态,且未停在平层区,此时如符合运行的安全要求,电梯将自动以慢速运行至平层区,然后开门。
启动转矩自动补偿	电梯在运行前,自动根据轿厢的载重情况,进行启动补偿,达到平稳启动的效果,提高乘坐舒适感。
直接停靠	自动运算生成运行曲线,没有爬行,直接停靠平层位置,提高运行效率。
按钮嵌入自诊断	老某层呼梯按钮嵌入长时间未断开,系统不再登记该层呼梯,且对应的按钮灯不断闪烁报警。
防捣乱	当电梯连续多次到站开门光幕不动作,系统判断为捣乱,取消已经登记的内指令。
空闲返基站	自动状态下,在设定的时间范围内电梯未使用,电梯自动返回基站等候乘客。
消防返回	消防状态下,所有召唤均被取消,电梯立即驶往指定救援层站停靠,并自动开门。
Running function	
VVVF Drive	Motor rotating speed can be precisely adjusted to get smooth speed curve in elevator start, travel and stop and gain the comfort.
VVVF Door Operator	Motor rotating speed can be precisely adjusted to get the more gentle and sensitive door machine start/stop.
Automatic Running	When there is no attendant who operates elevator, elevator will run to the destination floor according to the instruction of passenger automatical
Attendant Running	Elevator is operated by attendant, attendant press car calls as request of passengers and elevator will run to the destination floor according to the ca
VIP (special) Rupping	Elevator has priority to run to VIP destination floor to provide VIP service.

VVVF Drive	Motor rotating speed can be precisely adjusted to get smooth speed curve in elevator start, travel and stop and gain the comfort.
VVVF Door Operator	Motor rotating speed can be precisely adjusted to get the more gentle and sensitive door machine start/stop.
Automatic Running	When there is no attendant who operates elevator, elevator will run to the destination floor according to the instruction of passenger automatically.
Attendant Running	Elevator is operated by attendant, attendant press car calls as request of passengers and elevator will run to the destination floor according to the car calls.
VIP (special) Running	Elevator has priority to run to VIP destination floor to provide VIP service.
Best Curve Autogeneration	Based on principle of distance, calculating the speed curve, which is most suitable for human-machine function theory, and without limit by
	floor number and short floor height.
Response in Accelerating Process	System allows the elevator to stop during accelerating process, to respond service floor call. This function improves the running efficiency.
Time-sharing Service Floor Selection	System allows to set time period and corresponding service floor flexibly.
Full Load by Pass	When the car is full load, the elevator will by pass the landing calls which has been registered to keep maximum running efficiency.
Automatic Adjustment of	According to current registered landing call and call situation, system will automatically adjust the door open holding time.
Door Open Holding Time	
Door Re-open at Current Floor	When door is closing, door can re-opened by pushing landing call button at current floor.

Instant Door Close	When door is completely opened, by pushing the door close button, door will close at once.
Door Open After Stop	Elevator decelerates to land, until it completely stops, then open the door.
Arrival Gong	Arrival gong on the car top advices passengers that elevator arrives.
Car Call Cancel	If passengers press a wrong floor button in car, to press same button again can cancel the wrong register.
Parking	When electric key switch is turn off, elevator enters into parking state, it will not serve to any landing call.
Next Landing	If door open limit signal is invalid when door open time exceeds the preset door open protection time,
	the elevator will close the door automatically and run to the next landing for parking.
Self Rescue in Low Speed	When the elevator is not in inspection status and leveling position, elevator will run to the leveling zone and open
	the door if it meets safety running requirement at the time.
Starting Torque Automatic	Controller gives a starting compensation to reach smooth starting and enhance comfortable feeling according to the car load before elevator running.
Direct Landing	Running curve is generated automatically without crawling process, Elevator lands at the leveling zone directly,
	which enhances the running efficiency greatly.
Button Inset Diagnose	If any floor button is pressed for a long period, system won't register this floor call, and the corresponding button light will twinkle to alarm.
Anti-nuisance	When light curtain doesn't act continuously on several landings, system will judge it as nuisance, all the registered car calls will be cancelled.
Return to G.floor in Free	In automatic status, if elevator is not used for a setting period, the elevator will return to G floor to wait passengers automatically.
Fire Emergency Return	In fire emergency state, all landing calls are eliminated, elevator runs to the preset floor and open door.

应急功能		
应急照明	停电时,自动打开轿内应急照明。	
紧急电动运行	当进入紧急电动状态时,轿厢以低速点动运行。	
五方通话装置	通过对讲机,可在轿内、轿顶、电梯机房、井道底坑、教摄值班室之间通话。	
警铃	紧急时,连续按下轿内操纵箱上的警铃按钮,安装于轿厢顶上的警铃会鸣响。	
Emergency Function		
Emergency Lighting	When power is off, car emergency light gets on automatically.	
Emergency Electric Operation	When elevator enters into emergency electric operation state, elevator runs in low speed jog running.	
5-way intercom	Communication between car inner, car top, machine room, pit and security room through intercoms is realized	
Alarm Bell	In emergency situation, pressing the alarm bell button on C.O.P. continuously, alarm bell on car top will ring.	

Alarm Bell	In emergency situation, pressing the alarm bell button on C.O.P. continuously , alarm bell on car top will ring.	
节能功能		
风扇、照明自动关闭	在规定的时间内没有召唤或指令信号,轿厢内风扇和照明会自动关闭,节约能源。	
定时自动开关梯	系统按所设置时间自动开梯/关梯。	
夜间到站钟取消功能	在设定的时间范围内,电梯将取消到站钟功能。	
Energy saving		
Fan&Light Automatic Off	If there is no car call or landing call in a preset time, car inner fan and light will be automatically off to save energy.	
Start/Stop Timing	System starts / stops elevator running according to the preset timing.	
Nighttime Arrival Gong	Arrival gong function will be cancelled within the setting time.	
Canelling Function		

安全功能	
抱闸力自动检测	系统将定期自动对制动器的制动力进行检测,如制动力不符合要求,采取保护措施。
光幕保护	光幕被遮挡时,关门动作立即停止且自动开门。
超载停驶	骄厢超载时,电梯门常开,蜂鸣器鸣响并停止于该层站。
曳引绳滑动检测	实时检测电梯运行位置偏移量,钢丝绕打滑超出允许值时,电梯减速,停止运行。
检修操作	当进入检修状态时,轿厢以低速点动运行。
故障自诊断	系統自动获取故障发生时的状态信息,以便快速排除故障,迅速恢复电梯运行。
故障自动停靠	运行中系统发生故障,安全回路有效的前提下,电梯就近平层开门。
重复开关门	电梯开关门时因阻碍或干扰,电梯门会重复打开或关闭。
上下越层及上下极限保护装置	该装置可有效地防止当电梯万一发生失控时的冲顶或撞底现象,使电梯更安全可靠。
下行超速保护装置	当电梯下降运行超速时,该装置自动切断控制电源,使电机停止运转,安全钳动作,强制电梯停止运行。
上行超速保护装置	当电梯上行超速时,该装置自动将电梯减速或制停。
安全回路保护	安全回路断开或安全回路接触器粘连,电梯立即停止。
门联锁保护	门全部关闭,电梯方可运行,或门锁接触器粘连,电梯立即停止。
接触器保护	系统随时检测接触器动作是否可靠,发现异常,立即停止运行。
抱闸检测保护	对抱制的打开和闭合实时检测,若发生异常,或抱闸接触器粘连,电梯禁止启动。
保安层功能	启用功能后,电梯在规定的时间段内,电梯每次会先运行到保安层开门,然后再运行到目的层,提高安全性。
电压自动识别功能	系统通过检查输入电压的大小,自动调节电梯运行速度,以适应电源功率不足的情况(如应急运行)。
Safety Function	
Brakeage Automatic Detection	The brakeage will be detected by system automatically and regularly. If brakeage does not meet the requirement, it should take protection measures.
Light Curtain Protection	When light curtain is sheltered, door will stop closing at once and automatically open.
Overload Stop	When elevator is overload, elevator door keeps opening, buzz rings and elevator stops at the current floor.
Hoisting Rope Sliding Detection	Deviation of running location should be detected in real time. Elevator slow down and stop running when the steel rope slipping exceeds the allowable va
Inspection Operation	When elevator enters into inspection state, car runs in jog state.
Troubleshooting	Controller can record the latest 20 faults in memory to facilitate the fault elimination and restore elevator running.
Auto-landing with Fault	When there is any fault occurred in elevator running, and safety circuit is valid, elevator lands to the nearest floor.
Door Close Repeat	Due to the obstacle or interference, elevator door repeats door open and close.
Top/bottom Limit and	The devices can prevent elevator from crashing to the top or bottom of hoistway in case that elevator is out of control with fault.
Final Limit Protection	It ensures the safety and reliability.
Down Running Protection	When elevator runs down in over speed, this device cuts off the control power to stop the motor running,
	safety gear is motivated to force elevator to stop.
Up Running Protection	When elevator runs up in over speed, the device forces elevator to decelerate and braking.
Safety Circuit Protection	When elevator circuit is open or contacts are adhered, elevator stops running at once.
Door Interlock Protection	Only when all doors are completely closed, elevator can run. When door interlock contacts are adhered, elevator stops running at once.
Main Contactor Protection	System detects if the main contactor acts reliably, if any abnormal is detected, elevator stops running at once.
Brake Detecting Protection	System detects the brake state, if there is any abnormal or braking contacts are adhered, elevator can't start running.
Security Floor Function	Once this function is applied, elevator will run to security floor and open the door before running to the destination floor every time to improve safe
Voltage Automatic	System will adjust running speed automatically in order to adapt to underpower condition(such as emergency running) by checking input voltage.

人机界面	
微动指令按钮	轿内操纵箱指令按钮及层站召唤按钮采用新型徽动按钮 。
运行状态显示	系統能显示电梯运行方向、层楼、开关门、故障等信息。
机房选层	通过控制柜内的按键操作,进行内选登记。
不停层任意设定	可根据用户需要任意设定不停靠层站。
待梯层任意设定	可根据用户需要任意设定待梯层站。
层楼显示任意设定	可根据用户需要任意设置各楼层的显示字符(字母、数字)。
井道参数自学习	通过自学习,系统将测出各层楼的间距数据,并永久保存。
干扰评价	系统可对现场控制柜接地情况、井道线接地情况等作出正确评价。
编码器评价	自动检测编码器输出脉冲质量,及评价受干扰情况。
输入口干扰评价	系統可对輸入信号进行评价,指导作业人员合理布线、接地。
操纵箱调试	调试人员通过操纵箱的接口连接系统调试电梯提高效率。
运行次数及时间记录	系统可自动记录电梯运行次数及时间,以便提醒电梯维修保养。

Human-Machine Interface

Micro Push Button	C.O.P. and H.O.P. both adopts new micro push button.
Running State Display	System can indicates running direction, floor, door state, default ect.
Floor Selection in Machine Room	By operation on LCD indicator in the control cabinet, car call can be registered.
No Stop Floor Set	Set the non-stop floor according to the customer' requirement.
Homing Floor Set	Set the homing floor according to the customer' requirement.
Floor Indication Set	Set the indication (word or digit) for every floor.
Hoistway Self-learning	Through hoistway self-learning, system can measure out the distance between every floor and record them permanently.
Interference Evaluation	System can evaluate the earthing situation of control cabinet and hoistway cable.
Encoder Evaluation	System can evaluate the encoder output pulse and interference situation.
Input Port Evaluation	System can evaluate the input signal and conduct the electrician do the wiring and earthing properly.
COP Debugging	Debugging personnel connects system by plug of COP and it improves debugging efficiency.
Running Times and Time Record	System will record the elevator running times and time automatically so to remind maintenance.



┿ Optional Function 选配功能

监控功能		
远程监控	通过有线或无线通讯模块和软件,对电梯运行状态进行实时监控。	
小区监控	控制系统与小区监控室的终端相连,通过软件,可实时监控电梯运行状态、故障信息等。	
曳引机监控	无机房电梯装有曳引机监控装置,维修人员无需进入井道就可查看曳引机运行状况。	
Monitor Function		
Remote Monitor	By wire or wireless communication module, system performs real-time monitoring of elevator running state.	
Residential Area Monitor	Connecting the terminal of control system and residential area monitor, it can know the elevator running status, fault and other situation by program.	
Traction Machine Monitor	The monitor for machine room less elevator installed on the traction machine top can monitor the traction machine state	

运行功能		
消防联动功能	系統接收到大楼消防信号,电梯进入消防状态,返回到消防层后反馈信号给大楼消控中心。	
提前开门	电梯减速进入开门区域,提前开门,提高运行效率。	
贯通门独立控制	当轿厢有两个门时,可根据用户的具体需求实现对两个门的独立控制。	
再平层功能	电梯在当前层,当过多乘客进入电梯或离开电梯时,由于钢丝绳的伸长或缩短,轿厢偏离平层区,电梯将启动低速运行至平层区。	
并联功能	用于两台电梯并联运行,互相调度减少乘客的候梯时间,以提高运行效率。	
群控功能	用于三台至八台电梯综合控制,充分提高电梯运行效率。	
轿厢杀菌功能	采用负离子杀菌技术对轿厢进行杀菌消毒,并使电梯轿厢内空气更加洁净。	
能量回馈功能	将电梯运行过程中产生的再生能量回馈到电网,达到绿色节能效果。	
地震检测功能	当地震检测装置动作,信号输入到系统,电梯会就近停靠,停止服务,直到地震信号消除,人工复位故障后才恢复正常。	
Running Function		
Fire-fighting Linkage Function	Elevator will in fire-fighting status once system receive the fire-fighting signal, feedback signal to fire-fighting center after back to fire-fighting floor.	
Advanced Door Opening	When elevator enters into leveling zone, it opens door in advance, this function improves elevator running efficiency.	
Double Door Independent Control	When the car has two doors, two doors can be controlled independently according to customer's request.	
Re-leveling Function	When elevator lands to the current floor, due to elongation or shortening of steel rope induced by too many passengers entering into car or	
	exiting from car, elevator will depart from leveling position, then elevator will start low speed running to achieve the leveling position again.	
Duplex Control Function	This function is for two elevators' duplex control, it can reduce waiting time and improve the running efficiency.	
Group Control Function	This function is for 3~8 elevators' group control, it improves the running efficiency.	
Car Sterilize Function	Car will be fresh and clean after sterilization and disinfection by Anion sterilization technology.	
Energy Feedback Function	The regeneration energy of elevator running process will be feedback to power grid to reach energy saving effect.	
Earthquake Function	When earthquake detection device acts and input signal to controller system, elevator will park to the nearest landing and stop service until	
	earthquake signal removed. It will return to be normal after manual reset.	

- /	(木)	堺	ΠÉ
/	(I)	12 L	μь

语音报站	在正常运行到站的情况下,利用语音装置告知乘客有关信息。
背景音乐	在电梯正常运行中,系统自动播放背景音乐。
轿厢副操纵箱	用于大楼中候梯人群稠密的电梯,以便让轿厢内更多的乘客方便使用。
残疾人操纵箱	安裝在特殊位置和帶盲文按钮的操纵箱,便于残障人士使用。
IC卡控制功能	所有(部分)层站须经授权,必须用IC卡电梯方可使用。

Human-Machine Interface


Voice Announcement	When elevator lands to the floor normally, voice announcement will advice passengers of the arrival.
Back Ground Music	When elevator runs normally, system will give out back ground music.
Sub-C.O.P.	It is for building with crowded passengers, it facilitates passengers to register call.
C.O.P. For Handicapped Passengers	C.O.P with braille buttons is installed in the special position to be used by disabled persons.
IC Card Control	All (part) of the floors need entry approval, only with IC card can run the elevator.

应急功能


停电自动疏散装置	停电时,应急装置提供电源,电梯驶往最近层站,自动开门,疏散乘客。
Emergency Function	
Automatic Rescue Device (ARD)	When power is off, this device supplies power to elevator, elevator runs to the pearest floor, open its door and evacuates the passengers.

- Civil Work Parameters 土建参数

井道立面布置图 Shaft elevation plan view

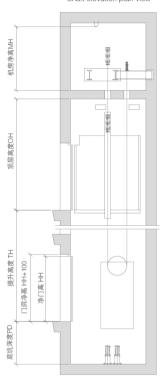

机房平面布置图 Machine room plan view

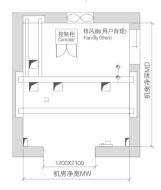

井道平面布置图 Shaft plan view




	载重量	载客人数	速度	开门方式	净开门(宽×高)	轿厢净尺寸 car net size	井道净尺寸(mm) shaft inside dimension			机房尺寸(mm) machine room size	
	capacity Kg	No.of persons	speed(m/s)	Door type	entrance (JJxHH)mm	宽×深(mm) (CW x CD)mm	宽x深 (HW x HD)	底坑 PD	顶层高 OH	宽×深×高 (MW xMD xMH)mm	
MRA bed elevator 有机房 病床电梯		21	1.0	中分	1000×2100 1200×2100	1400×2400	2450×2850 2550×3000	1400	4300	2450 × 2850 × 2500	
	1600		1.75					1600	4400		
			2.5					2000	5100		
			1.0	双折旁开				1400	4300	2550 × 3000 × 2500	
			1.75					1600	4400		
			2.5					2000	5100		
			3.0					2300	5500		
	2000	26	1.0	中分	1100×2100	1600×2600	2650 × 3050	1400	4300	2650 × 3050 × 2500	
			1.75					1600	4400		
			2.5					2000	5100		
			3.0					2300	5500		
			1.0	双折旁开	1300 × 2100		2750 × 3100	1400	4300		
			1.75					1600	4400	2750 × 3100 × 2500	
			2.5					2000	5100		
			3.0					2300	5500		


注: 如若超出以上规格范围,请与公司销售中心联系

Remark: Please contact with Sales department if it exceeds above specification


井道立面布置图 Shaft elevation plan view

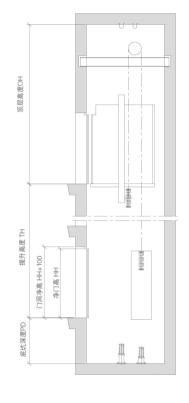

顶层平面布置图 Overhead plan view

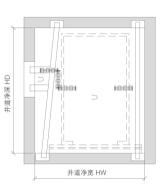

井道平面布置图 Shaft plan view

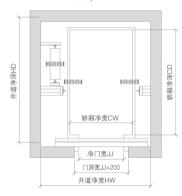

	载重量	载客人数	速度	开门方式	净开门(宽x高)	轿厢净尺寸 car net size			尺寸(mm) e dimension	
MRL bed elevator	capacity Kg	No.of persons	speed(m/s)	Door type	entrance (JJxHH)mm	宽×深(mm) (CW x CD)mm	宽×深 (HW x HD)	底坑 PD	顶层高 OH	
无机房病床电梯	1600	21	1.0	中分	1000×2100	1400×2400	2550 × 2850	1600	4200	
			1.75					1800	4400	
			1.0	双折旁开	1200×2100		2450×2900	1600	4800	
			1.75					1800	5000	

注: 如若超出以上規格范围,请与公司销售中心联系

Remark: Please contact with Sales department if it exceeds above specification

Attentive service 细心服务

完善的售后服务体系, 让您无后顾之忧

我们在售前、售中、售后的整个过程全面建立了完善的和高标准的服务体系,对售出的每一台电梯都将实行及时、高效地售后服务及有偿终身维修保养,让您的选择无后顾之忧。

Perfect after-sale service, resolve the actual difficulties

We builded a perfect and high standard service system comprehensively between before–sale, mid–sale and after sale, and we implements the perfect after–sale service and life–long repair& maintenance to every lift which has been sold to the customers. This is our solemn guarantee to you that we resolve the actual difficulties for the customers.



